




1:2

2_021

Width: 341.6 mm
13.45 inch

Height: 330.8 mm
13.02 inch

Stitches: 101897



Robison-Anton
Gütermann Sulky

1:1  2539
1327

1:2  1011
7012

1:3  1006
7006

1:4  1012
7052

1:5  1006
7006

1:6  1006
7006


1:7  2539
1327


1:8  Needle #1

1:9  Needle #2

* Add a new water
soluble stabilizer underneath


1:10  2539
1327


1:11  2539
1327

 Trim and remove
the cut fabric

1:12  2539
1327

1:13  1014
7021

1:14  2539
1327

2:1  2539
1327

2:2  1011
7012

2:3  1012
7052

2:4  1006
7006


2:5  2539
1327


2:6  Needle #1


2:7  Needle #2

* Add a new water
soluble stabilizer underneath

2:8  2539
1327


2:9  2539
1327

 Trim and remove the
cut fabric


2:10  2539
1327

2:11  1014
7021

2:12  2539
1327

 Clean the bobbin area

2_022

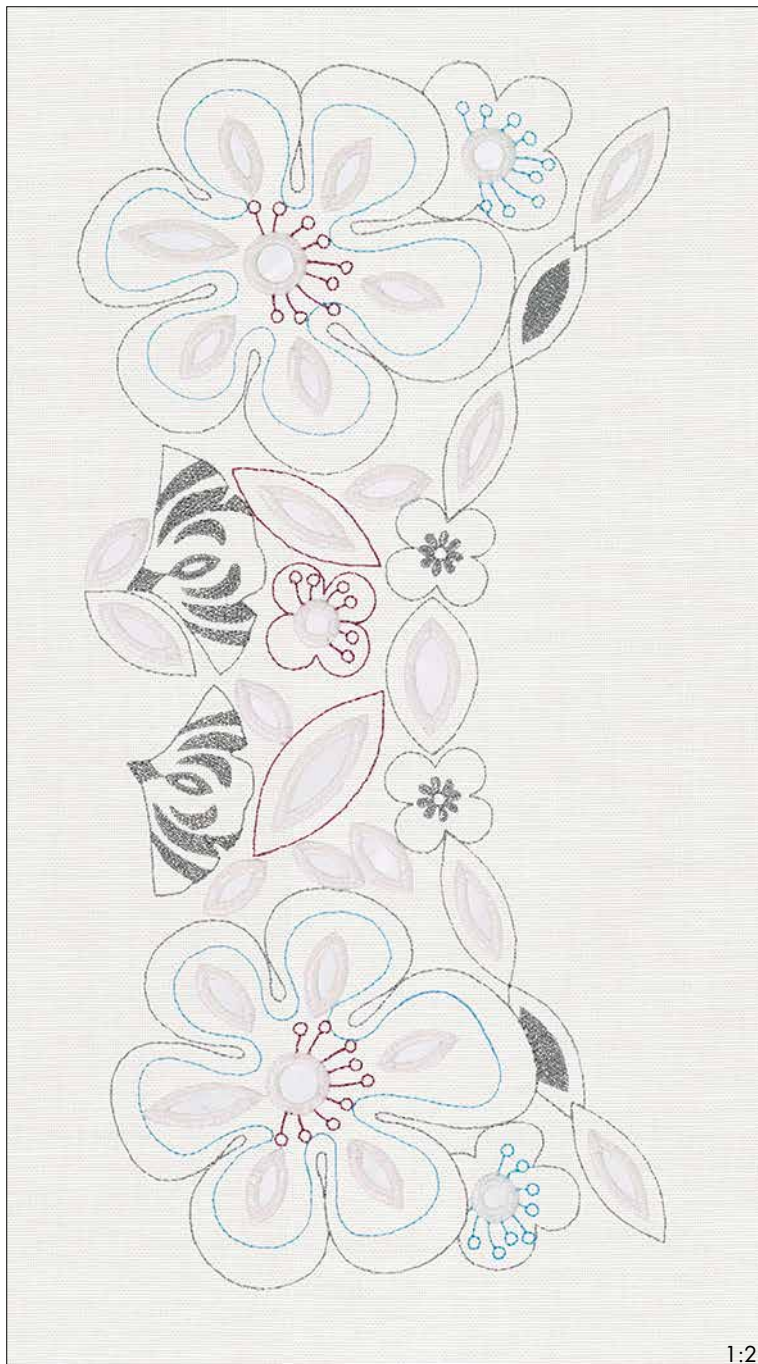

Width: 164 mm
6.45 inch

Height: 350 mm
13.77 inch

Stitches: 41145

Robison-Anton
Gütermann Sulky

1  2539
1327

2  1011
7012

3  1006
7006

4  1012
7052

5  1006
7006

6  1006
7006

7  2539
1327


8  Needle #1

9  Needle #2

* Add a new water
soluble stabilizer underneath

10  2539
1327


11  2539
1327


 Trim and remove the
cut fabric

12  2539
1327

13  1014
7021

14  2539
1327

 Clean the bobbin area



1:2

2_023



Width: 176.6 mm
6.96 inch


Height: 350 mm
13.77 inch

Stitches: 63512

Robison-Anton
Gütermann Sulky

1  2539
1327

2  1011
7012

3  1012
7052

4  1006
7006

5  2539
1327


6  Needle #1

7  Needle #2

* Add a new water
soluble stabilizer underneath

8  2539
1327


9  2539
1327


 Trim and remove the
cut fabric

10  2539
1327

11  1014
7021


12  2539
1327

 Clean the bobbin area



1:2

2_024

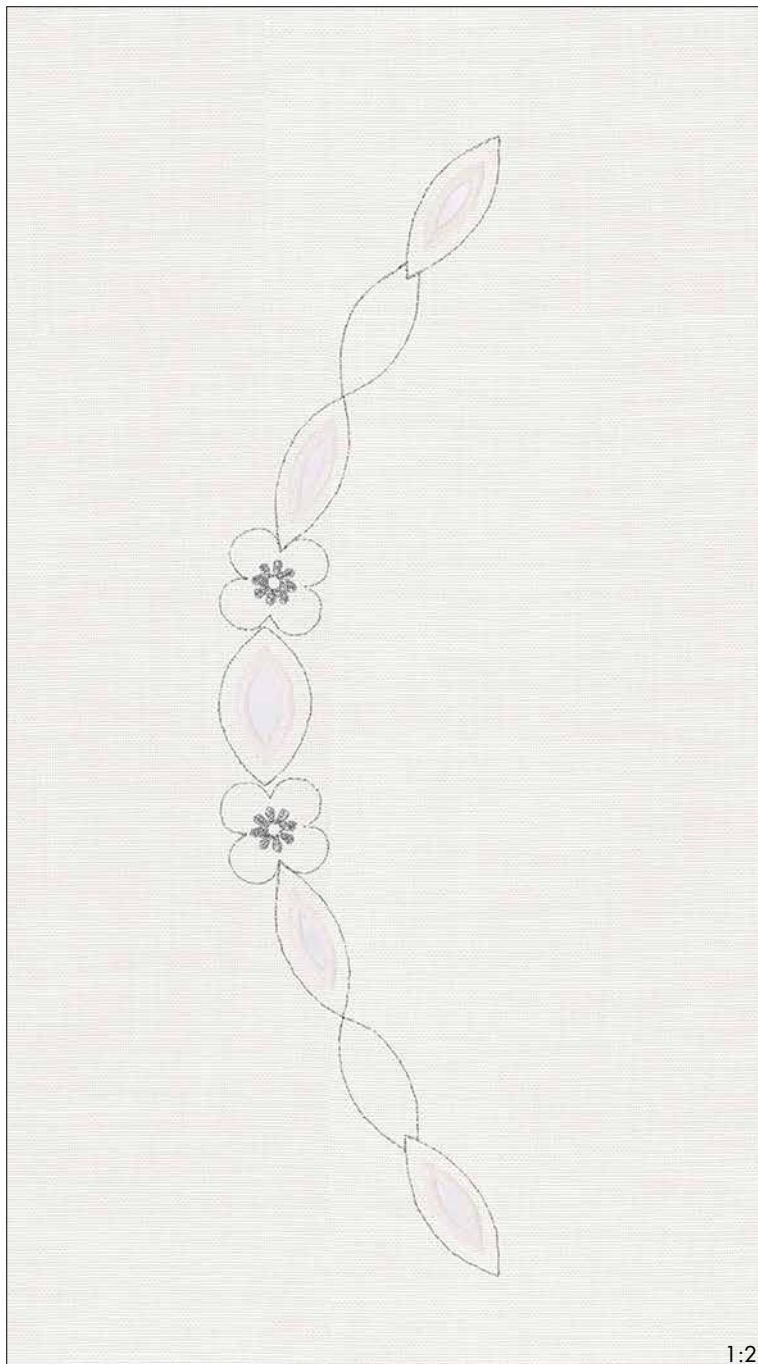

Width: 82 mm
3.22 inch

Height: 329 mm
12.95 inch

Stitches: 7735

Robison-Anton
Gütermann Sulky

1  1006
7006

2  1006
7006

3  2539
1327


4  Needle #1

5  Needle #2

* Add a new water
soluble stabilizer underneath


6  2539
1327


7  2539
1327

 Trim and remove the
cut fabric

8  2539
1327

9  1014
7021

 Clean the bobbin area



1:2

2_025









Width: 176.6 mm
6.96 inch

Height: 183.6 mm
7.22 inch



Stitches: 34293


Robison-Anton
Gütermann Sulky



- 1  1011
7012
- 2  1012
7052
- 3  1006
7006
- 4  2539
1327


- 5  Needle #1
- 6  Needle #2

* Add a new water soluble stabilizer underneath


- 7  2539
1327
- 8  2539
1327

 Trim and remove the cut fabric


- 9  2539
1327
- 10  1014
7021

 Clean the bobbin area

1:2



2_026

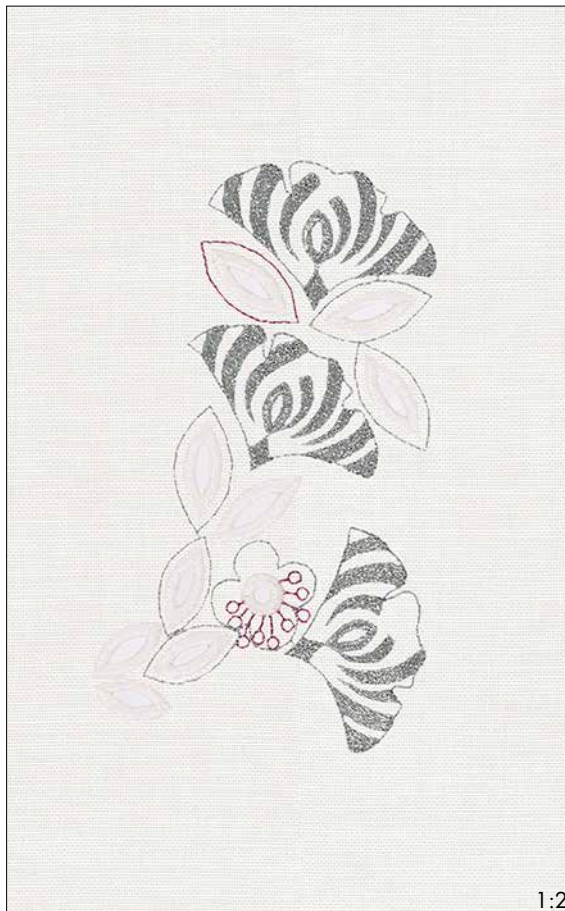






Width: 99.7 mm
3.93 inch

Height: 161.5 mm
6.35 inch

Stitches: 14888


Robison-Anton
Gütermann Sulky

- 1  1011
7012
- 2  1006
7006
- 3  2539
1327

- 4  Needle #1
- 5  Needle #2


* Add a new water soluble stabilizer underneath

- 6  2539
1327


 Trim and remove the cut fabric

- 7  2539
1327



- 8  1014
7021

 Clean the bobbin area

1:2



2_027

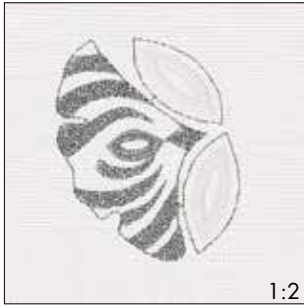

Width: 48.8 mm
1.92 inch

Height: 59.3 mm
2.32 inch

Stitches: 3956

Robison-Anton
Gütermann Sulky

1 1006
7006

2 2539
1327

3 Needle #1

4 Needle #2

* Add a new water
soluble stabilizer underneath

5 2539
1327



Trim and remove the
cut fabric

6 2539
1327

7 1014
7021

Clean the bobbin area

2_028

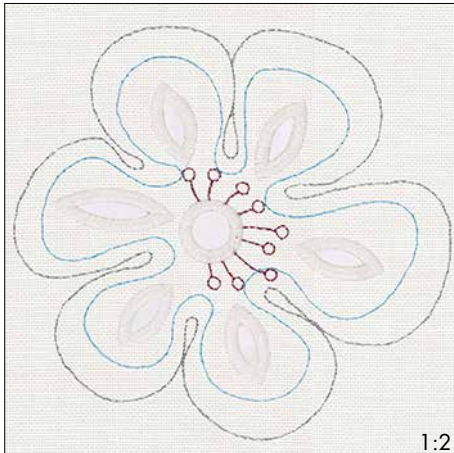

Width: 115.9 mm
4.56 inch

Height: 110.1 mm
4.33 inch

Stitches: 8370

Robison-Anton
Gütermann Sulky

1 1011
7012

2 1012
7052

3 1006
7006

4 2539
1327

5 Needle #1

6 Needle #2

* Add a new water
soluble stabilizer underneath

7 2539
1327



Trim and
remove the cut fabric

8 2539
1327

9 1014
7021

Clean the
bobbin area

2_029

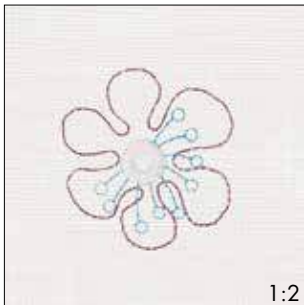

Width: 45.5 mm
1.79 inch

Height: 48.1 mm
1.88 inch

Stitches: 1382

Robison-Anton
Gütermann Sulky

1 1011
7012

2 1012
7052

3 2539
1327

4 Needle #1

5 Needle #2

* Add a new water
soluble stabilizer underneath

6 2539
1327


Trim and remove the
cut fabric

7 2539
1327

8 1014
7021

Clean the bobbin area

2_030

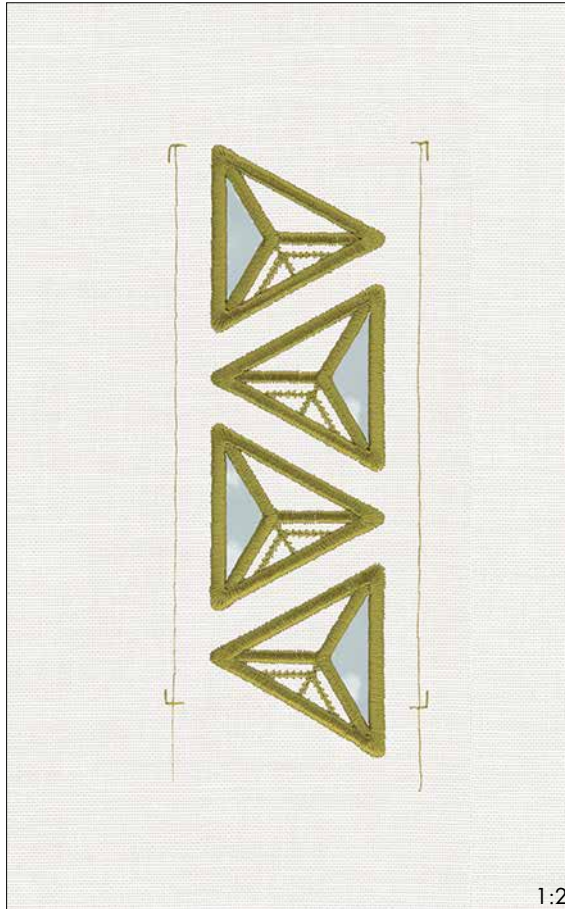

Width: 70 mm
2.76 inch

Height: 173 mm
6.81 inch

Stitches: 11310

Robison-Anton
Gütermann Sulky


1  2230
1834

(✂) Cut inside marked area
if not using INSPIRA™ Cutwork
Needles

2  Needle #1


3  Needle #2

* Add a new water
soluble stabilizer underneath

4  2230
1834


(✂) Trim and remove the
cut fabric

5  2230
1834

 Clean the bobbin
area



2_037

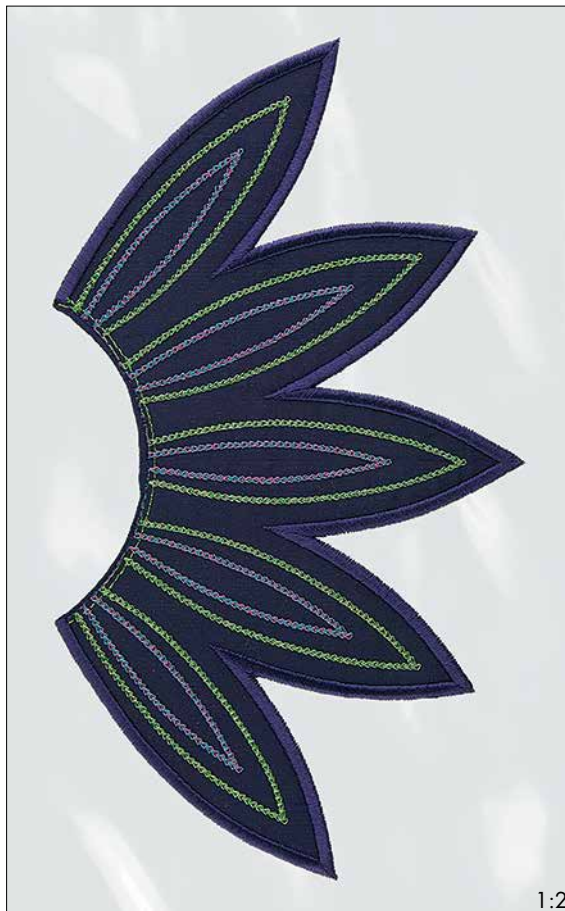

Width: 124.6 mm
4.91 inch

Height: 222.8 mm
8.77 inch

Stitches: 10084


Robison-Anton
Gütermann Sulky

1  79051
2111

2  79051
2111


3  79082
2205

4  2736
1301

(✂) 5  2736
1301



2_038

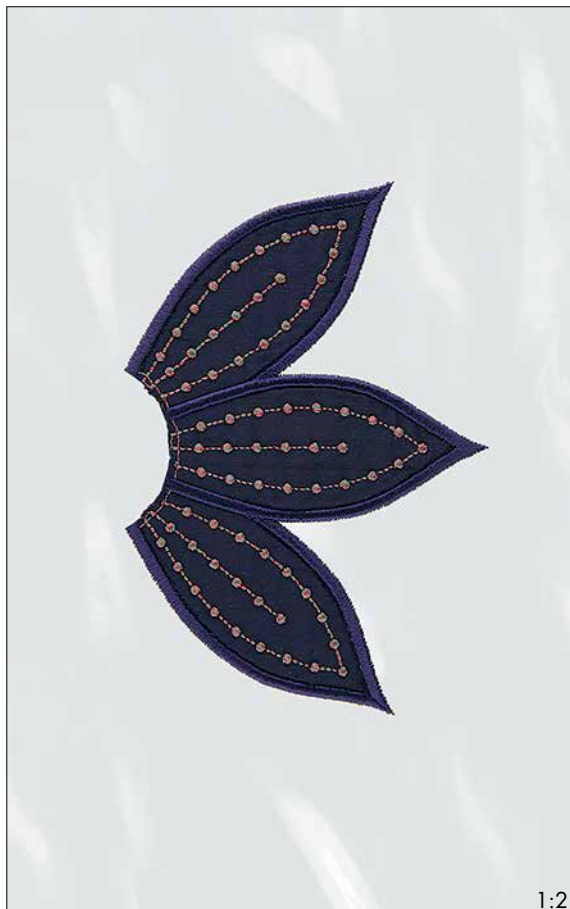

Width: 124.6 mm
4.91 inch


Height: 222.8 mm
8.77 inch

Stitches: 10084

Robison-Anton
Gütermann Sulky

- 1  79083
2124
- 2  79083
2124
- 3  2736
1301
- ✂
- 4  2736
1301

2_039

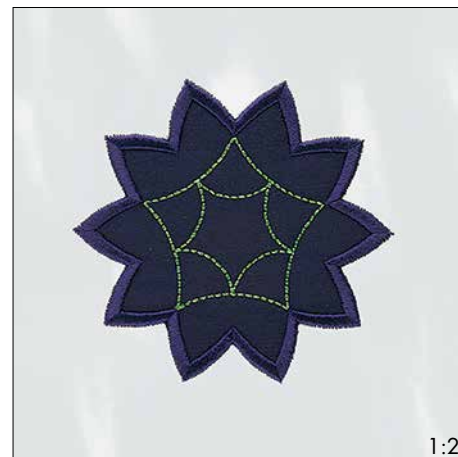

Width: 84.1 mm
3.31 inch


Height: 80 mm
3.15 inch

Stitches: 3702

Robison-Anton
Gütermann Sulky

- 1  79051
2111
- 2  79051
2111
- 3  2736
1301
- ✂
- 4  2736
1301

2_040

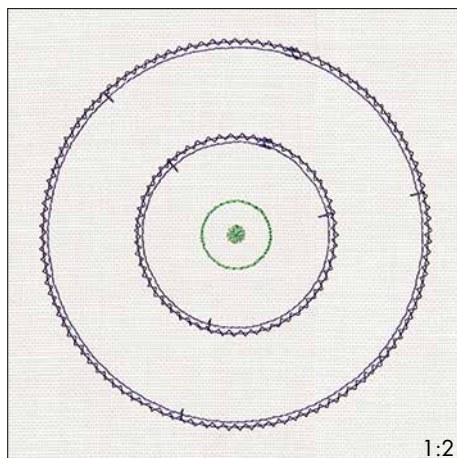





Width: 104.7 mm
4.12 inch

Height: 104.8 mm
4.13 inch

Stitches: 1092

Robison-Anton
Gütermann Sulky

- 1  2736
1301
- △
- 2  2736
1301
- △
- 3  2736
1301
- △
- 4  79051
2111

2 2_037 x 3

3 2_038 x 3

4 2_039



2_086













Width: 150 mm
5.91 inch


Height: 150 mm
5.91 inch

Stitches: xxx

Robison-Anton
Gütermann Sulky

- 1 
- 2 
- 3 
- 4  Needle #1
- 5  Needle #2
- * Add a new water soluble stabilizer underneath
- 6 
-  Trim and remove the cut fabric
- 7 
- 8 
-  Clean the bobbin area

2_107

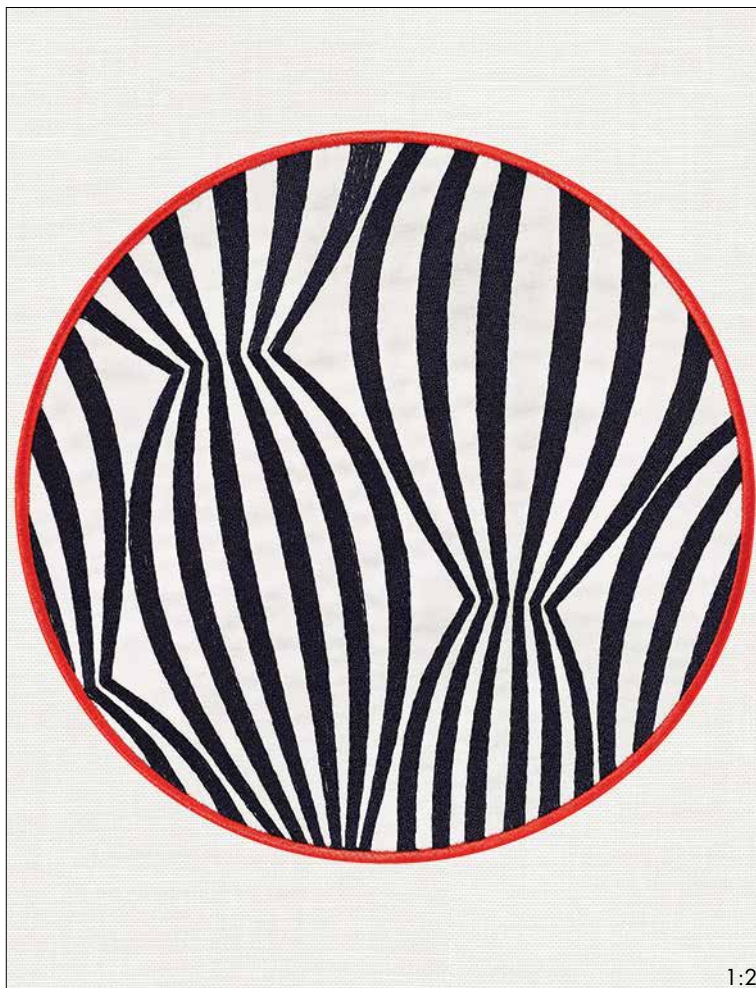




Width: 196.4 mm
7.73 inch

Height: 196.4 mm
7.73 inch


Stitches: 27624

Robison-Anton
Gütermann Sulky

- 1  2296
1005
- 2  2296
1005
- 3  2296
1005
- 
- 4  2329
1246



2_108

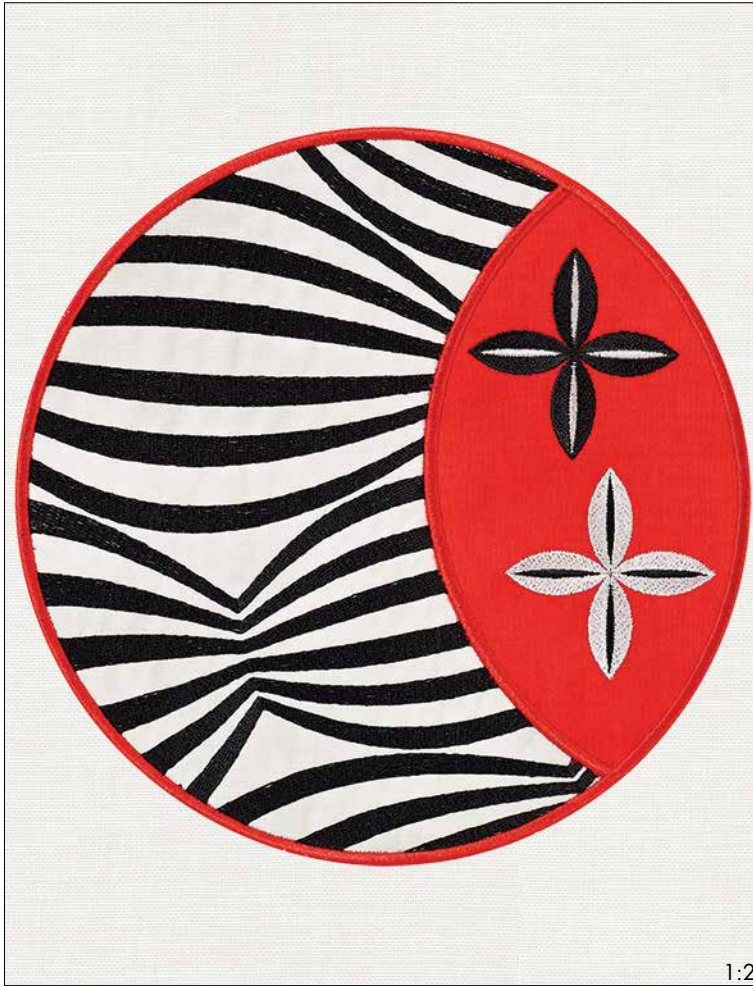












Width: 196.4 mm
7.73 inch

Height: 196.4 mm
7.73 inch


Stitches: 28062

Robison-Anton
Gütermann Sulky

- 1  2296
1005
- 2  2296
1005
- 3  2296
1005
- 4  2340
1327
- 5  2340
1327
- 6  2340
1327
- 7  2296
1005
- 8  2296
1005
- 9  2340
1327
- 10  2329
1246



2_109

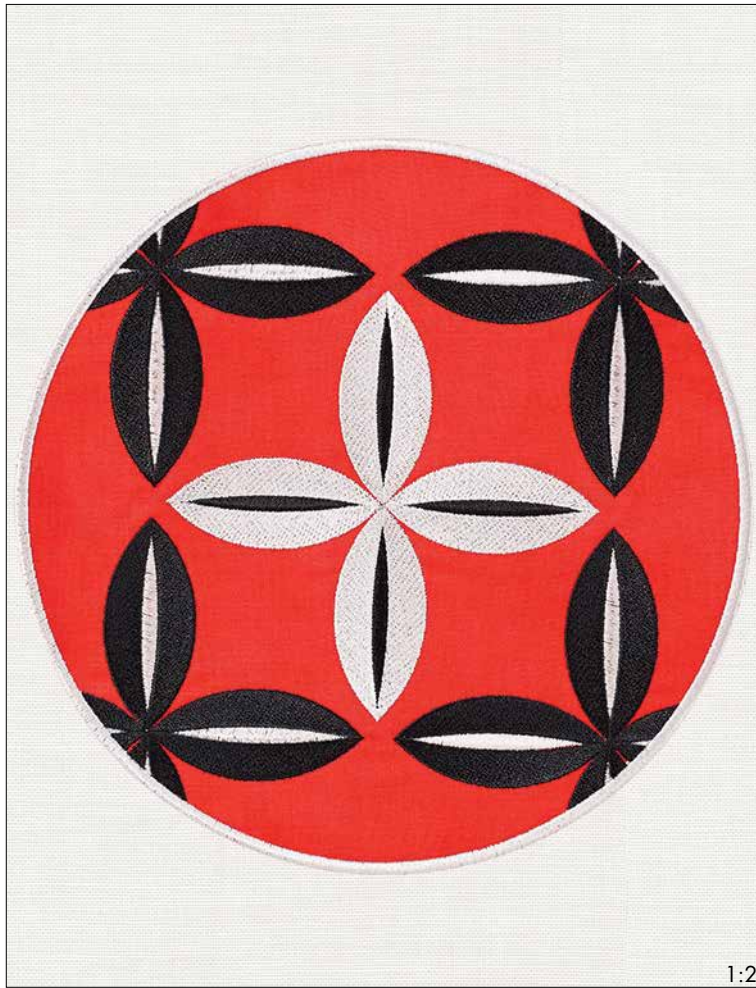








Width: 196.4 mm
7.73 inch

Height: 196.4 mm
7.73 inch


Stitches: 37857

Robison-Anton
Gütermann Sulky

- 1  2296
1005
- 2  2296
1005
- 3  2296
1005
- 4  2340
1327
- 5  2340
1327
- 6  2296
1005
- 7  2340
1327

1:2

2_110

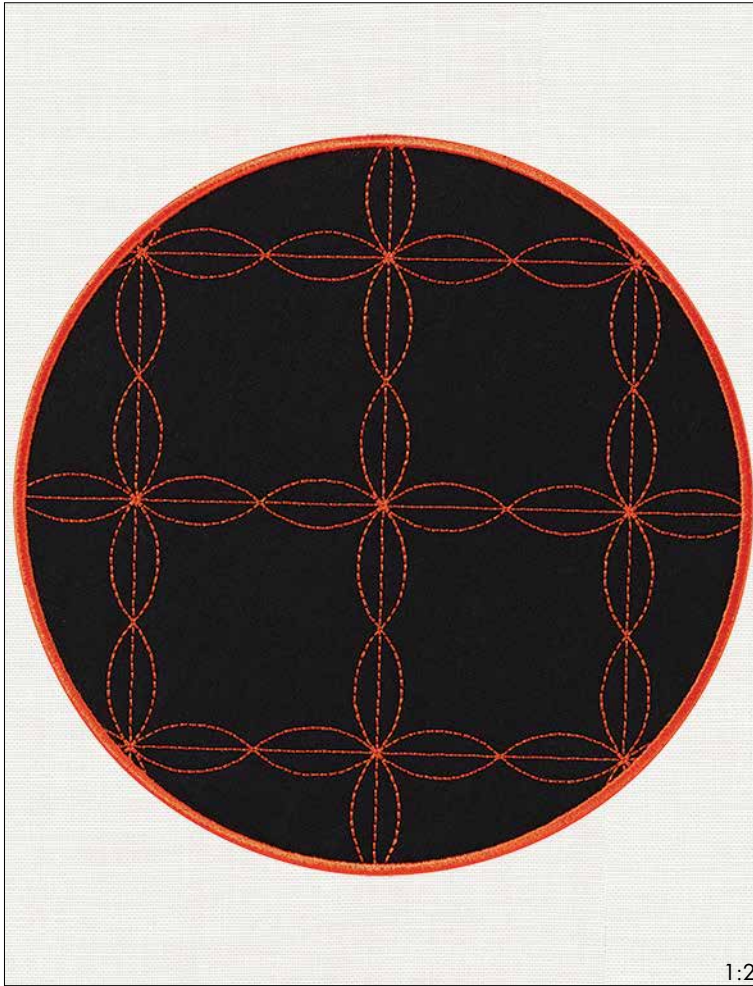






Width: 196.4 mm
7.73 inch

Height: 196.4 mm
7.73 inch

Stitches: 9317


Robison-Anton
Gütermann Sulky

- 1  2468
1078
- 2  2468
1078
- 3  2468
1078
- 4  2468
1078



1:2

2_113

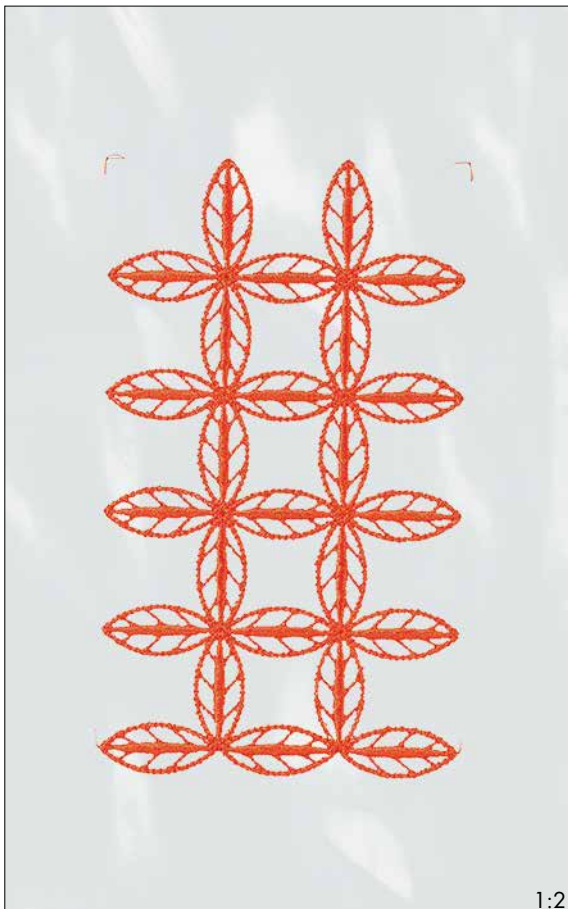





Width: 96.6 mm
3.81 inch

Height: 163.4 mm
6.43 inch

Stitches: 17157


Robison-Anton
Gütermann Sulky

- 1  2468
1078
- 2  2468
1078
- 3  2468
1078



1:2

2_122

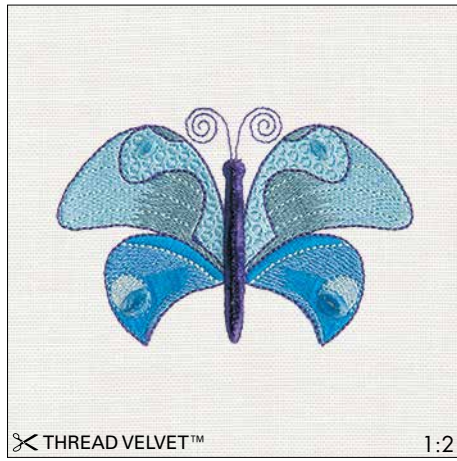




Width: 95.5 mm
3.8 inch










Height: 63.6 mm
2.5 inch

Stitches: 12540

Robison-Anton
Gütermann Sulky

- 1  2239
1248
- 2  2206
1028
- 3  2388
1534
- 4  2536
1291
- 5  2525
1223
- 6  2381
1195
- 7  2628
1122
- 8  2522
1030
- 9  2206
1028

Robison-Anton
Gütermann Sulky

- 1  2415
1256
- 2  2286
1254
- 3  2628
1122
- 4  2590
1191
- 5  2285
1111
- 6  2381
1195
- 7  2628
1122
- 8  2261
1231
- 9  2286
1254

Robison-Anton
Gütermann Sulky

- 1  2464
1024
- 2  2461
1135
- 3  2466
1185
- 4  2328
1168
- 5  2732
1061
- 6  2381
1195
- 7  2628
1122
- 8  2218
1078
- 9  2461
1135

2_123







Width: 84.7 mm
3.3 inch










Height: 81 mm
3.2 inch

Stitches: 9590

Robison-Anton
Gütermann Sulky

- 1  2239
1248
- 2  2206
1028
- 3  2388
1534
- 4  2536
1291
- 5  2525
1223
- 6  2381
1195
- 7  2628
1122
- 8  2522
1030
- 9  2206
1028

Robison-Anton
Gütermann Sulky

- 1  2415
1256
- 2  2286
1254
- 3  2628
1122
- 4  2590
1191
- 5  2285
1111
- 6  2381
1195
- 7  2628
1122
- 8  2261
1231
- 9  2286
1254

Robison-Anton
Gütermann Sulky

- 1  2464
1024
- 2  2461
1135
- 3  2466
1185
- 4  2328
1168
- 5  2732
1061
- 6  2381
1195
- 7  2628
1122
- 8  2218
1078
- 9  2461
1135

2_130



Width: 191.8 mm
7.56 inch

Height: 251.7 mm
9.91 inch

Stitches: 55843

Robison-Anton
Gütermann Sulky


- 1 ■ 2296
1234
- 2 ● 2296
1234
- 3 ✂ 2456
1209
- 4 ■ 2456
1209
- 5 ■ 1001
7004
- 6 ■ 2560
1023
- 7 ■ 2296
1234
- 8 ■ 2214
1049
- 9 ■ 2560
1023
- 10 ■ 1000
7007
- 11 ■ 2453
1051



✂ THREAD VELVET™

1:2

2_131

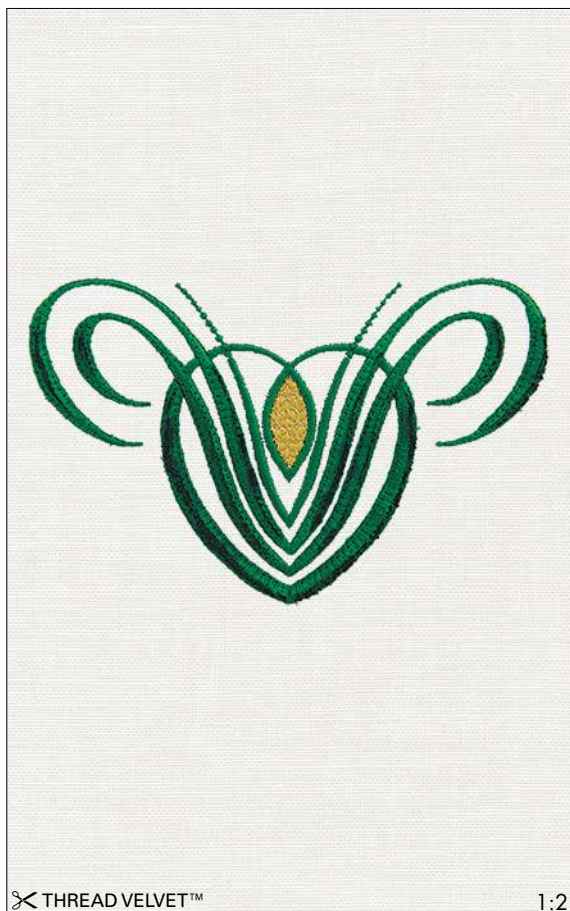

Width: 135.7 mm
5.34 inch

Height: 86.6 mm
3.41 inch

Stitches: 18787



Robison-Anton
Gütermann Sulky

- 1 ■ 1000
7007
- 2 ■ 2284
1208
- 3 ■ 2453
1051

✂ THREAD VELVET™

1:2

3_021

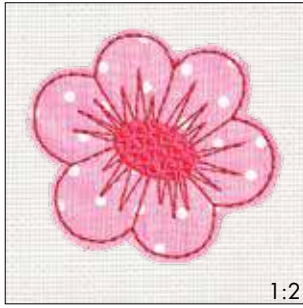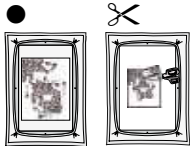




Width: 65.0 mm
2.56 inch


Height: 59.0 mm
2.32 inch

Stitches: 1791

Robison-Anton
Gütermann Sulky

- 1  2497
1308
-
- 2  2497
1308
- ✂
- 3  2416
1231

3_022










Width: 124.3 mm
4.89 inch

Height: 120.3 mm
4.74 inch

Stitches: 2055

Robison-Anton
Gütermann Sulky

- 1  2621
1513
-
- 2  2621
1513
- ✂
- 3  2285
1031
- 4  2285
1031
- 5  2424
1080
- 6  2415
1109
- 7  2343
1063

3_023








Width: 106.0 mm
4.2 inch

Height: 107.0 mm
4.2 inch

Stitches: 2408

Robison-Anton
Gütermann Sulky

- 1  2415
1109
-
- 2  2415
1109
- ✂
- 3  2343
1063
- 4  2285
1031
- 5  2425
1032

3_024




Width: 195.5 mm
7.70 inch

Height: 255.0 mm
10.0 inch


Stitches: 5357

Robison-Anton
Gütermann Sulky

- 1 ■ 2376
1189
- 2 ■ 2376
1189
- 2376
1189
- 3 ■ 2376
1189
- ✂ 2225
1190
- 4 ■ 2225
1190
- 2225
1190
- ✂ 2425
1032
- 5 ■ 2425
1032
- 2425
1032
- ✂ 2342
1071
- 8 □ 2342
1071
- 2342
1071
- ✂ 2447
1230
- 10 ■ 2447
1230



3_025

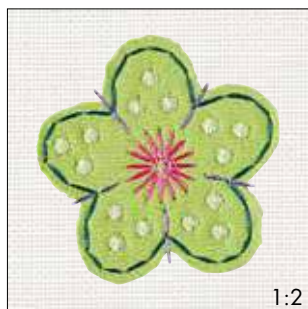


Width: 60.3 mm
2.37 inch

Height: 60.5 mm
2.38 inch

Stitches: 1198

Robison-Anton
Gütermann Sulky

- 1 ■ 2621
1513
- 2621
1513
- 2 ■ 2621
1513
- ✂ 2424
1080
- 3 ■ 2415
1109
- 4 ■ 2415
1109
- 5 ■ 2343
1063

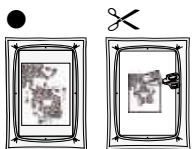

3_028



Width: 85.0 mm
3.3 inch

Height: 70.0 mm
3.4 inch

Stitches: 1547

Robison-Anton
Gütermann Sulky

- 1 ■ 2225
1190
- 2225
1190
- 2 ■ 2225
1190
- ✂ 2271
1120
- 3 ■ 2376
1189
- 4 ■ 2376
1189
- 5 □ 2342
1071
- 6 ■ 2381
1195



3_029







Width: 122.1 mm
4.81 inch

Height: 348.6 mm
13.72 inch

Stitches: 17805


Robison-Anton
Gütermann Sulky

- | | | |
|----|--------------------------------------------------------------------------------------|--------------|
| 1 |  | 2341
1143 |
| 2 |  | 2341
1143 |
| |  | |
| 3 |  | 2341
1143 |
| |  | |
| 4 |  | 2611
1190 |
| 5 |  | 2293
1119 |
| 6 |  | 2276
1117 |
| 7 |  | 2278
1207 |
| 8 |  | 2574
1002 |
| |  | |
| 9 |  | 2574
1002 |
| |  | |
| 10 |  | 2557
1070 |



1:2

3_030

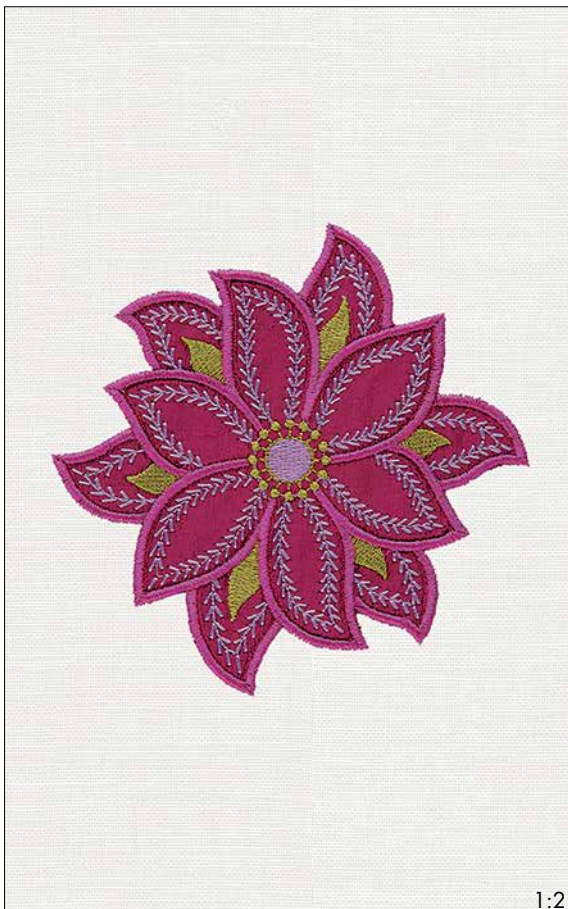








Width: 126.6 mm
4.98 inch

Height: 125.2 mm
4.93 inch

Stitches: 12308


Robison-Anton
Gütermann Sulky

- 1  2500
1192
-
- 2  2500
1192
- ✂
- 3  2500
1192
-
- 4  2588
1080
- ✂
- 5  2588
1080
- 6  2230
1834
- 7  2500
1192



1:2

3_031

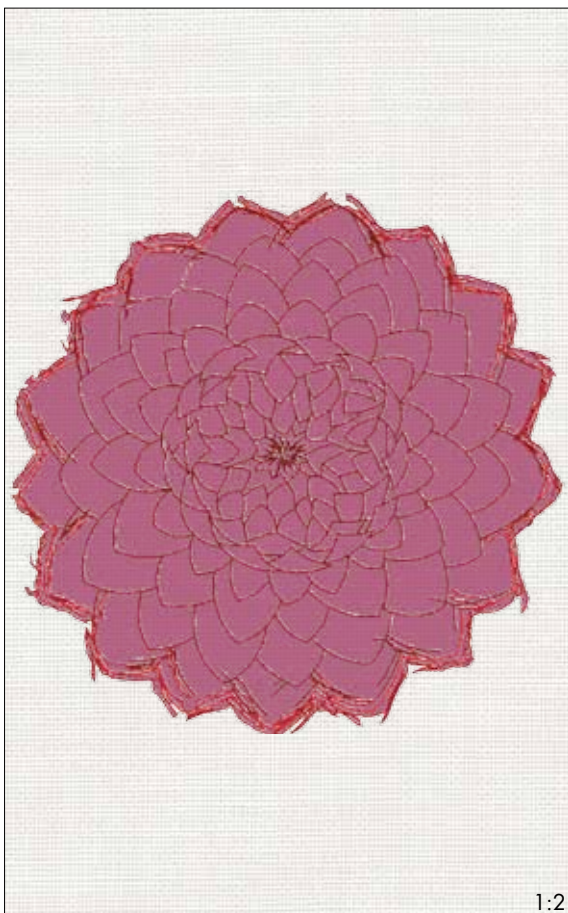





Width: 128.0 mm
5.04 inch

Height: 126.0 mm
4.96 inch

Stitches: 5916

Robison-Anton
Gütermann Sulky


- 1  1008
7055
-
- 2  1008
7055
- ✂
- 3  2380
1309
- 4  2376
1189

•
Reversed
appliqué



1:2

3_032

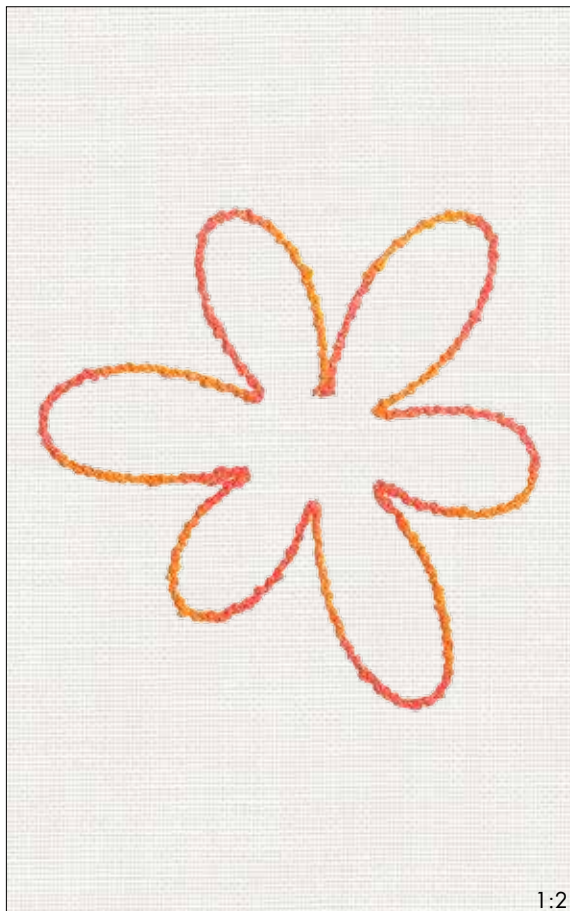

Width: 134.0 mm
5.28 inch

Height: 133.0 mm
5.24 inch

Stitches: 803

Robison-Anton
Gütermann Sulky

❖ 1		2497 1308
-----	------------------------------------------------------------------------------------	--------------



3_033















Width: 146.2 mm
5.76 inch

Height: 199.7 mm
7.86 inch

Stitches: 21048

Robison-Anton
Gütermann Sulky

- | | | |
|------|---------------------------------------------------------------------------------------|--------------|
| 1 |  | 2535
1536 |
| 2 |  | 2572
1269 |
| 3 |  | 2618
1180 |
| 4 |  | 2591
1119 |
| 5 |  | 2622
1263 |
| 6 |  | 1006
7009 |
| ❖ 7 |  | 2535
1536 |
| ❖ 8 |  | 2535
1536 |
| ❖ 9 |  | 2535
1536 |
| ❖ 10 |  | 2535
1536 |
| ❖ 11 |  | 2535
1536 |
| ❖ 12 |  | 2591
1119 |



3_034



Width: 194.7 mm
7.67 inch

Height: 253.4 mm
9.98 inch

Stitches: 10965

Robison-Anton
Gütermann Sulky

1  2381
1122

2  2498
1189

3  2498
1189

4  2292
1032

5  2381
1122

6  2497
1169

7  2292
1032

8  2590
1191


❖ 9  2590
1191

❖ 10  2590
1191



1:2

3_035

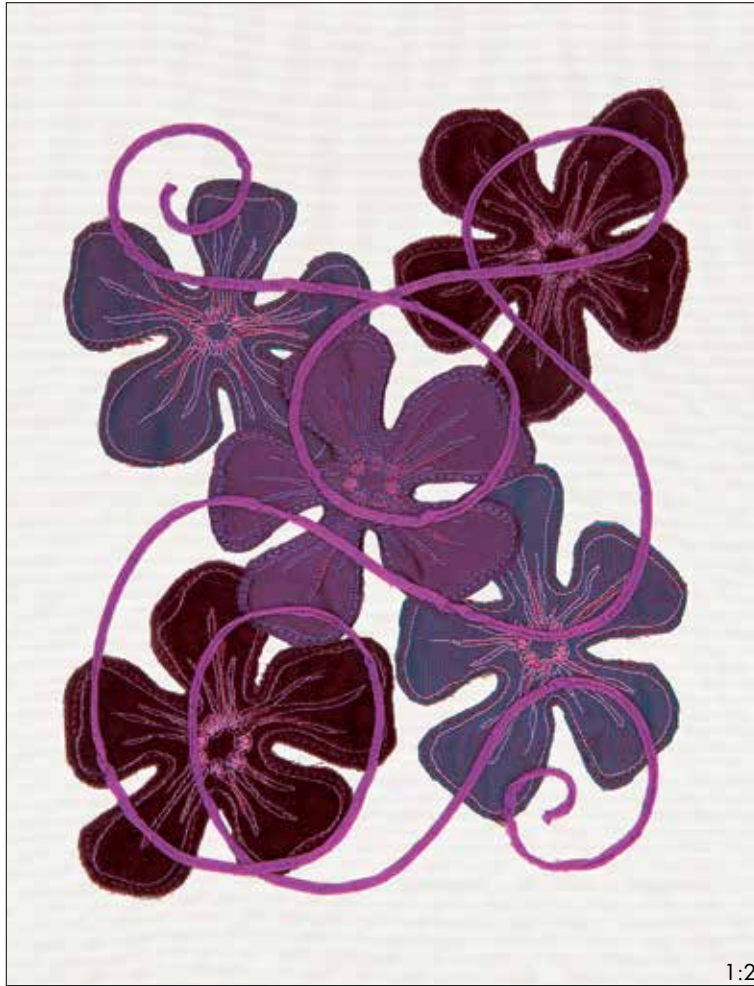

Width: 195.5 mm
7.70 inch

Height: 246.8 mm
9.72 inch

Stitches: 14498

Robison-Anton
Gütermann Sulky

1 ■ 2498
1189

2 ■ 2498
1189
✂

3 ■ 2497
1169

4 ■ 2292
1032

5 ■ 2498
1189
✂

6 ■ 2497
1169

7 ■ 2292
1032

8 ■ 2380
1813
✂


9 ■ 2497
1169

10 ■ 2381
1122

❖ 11 ■ 2590
1191



1:2

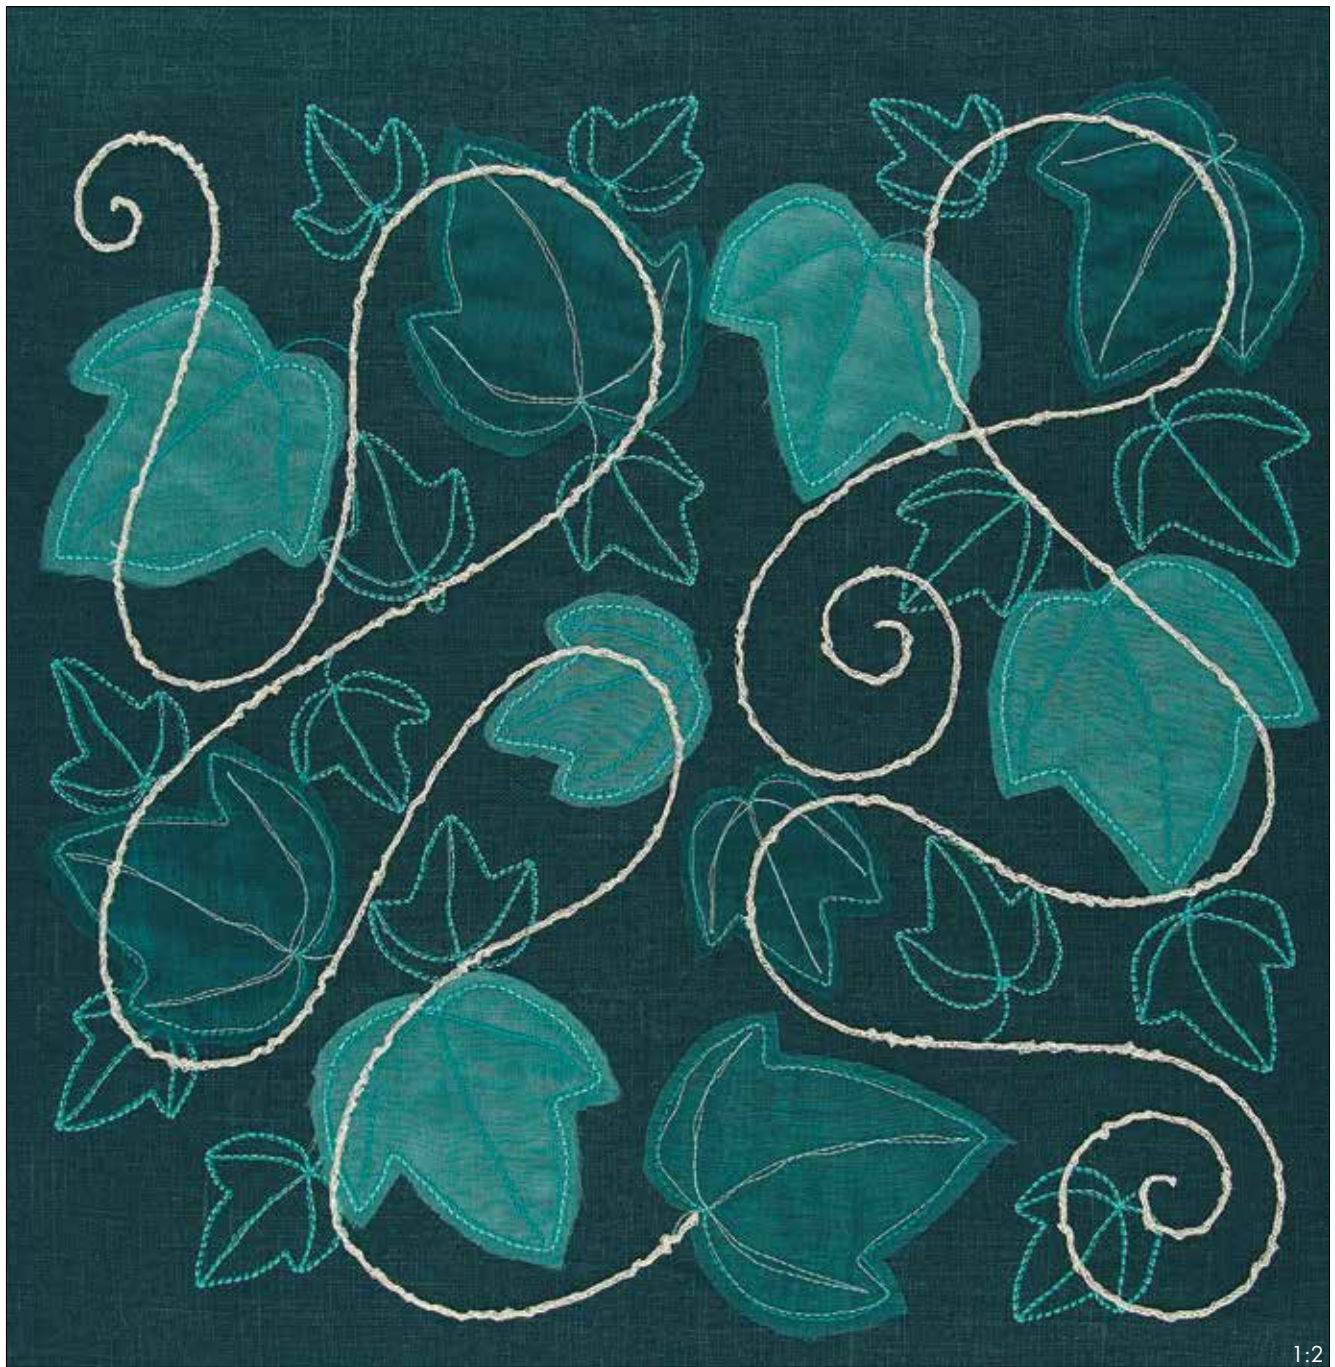

1:2

3_036

Width: 340 mm
13.4 inch

Height: 340.5 mm
13.3 inch


Stitches: 18201

Robison-Anton
Gütermann Sulky

1:1		2521 1285	2:1		2521 1285
1:2		2306 1560	2:2		2306 1560
1:3		2446 1503	2:3		2446 1503
1:4		2518 1095	2:4		2518 1095
1:5		2518 1095	2:5		2518 1095
1:6		2519 1090	2:6		2519 1090
❖ 1:7		2539 1327	❖ 2:7		2539 1327



3_037

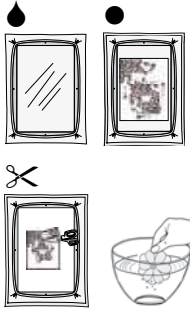




Width: 52 mm
2.05 inch


Height: 52 mm
2.05 inch

Stitches: 2598

Robison-Anton
Gütermann Sulky

- 1  2497
1308
- 2  2497
1308
- 3  2497
1308

3_038

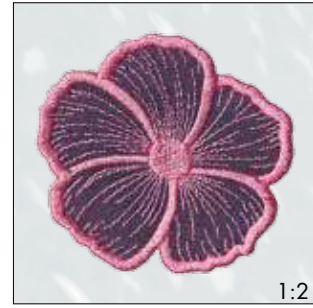




Width: 69 mm
2.7 inch


Height: 65 mm
2.6 inch

Stitches: 4000

Robison-Anton
Gütermann Sulky

- 1  2259
1256
- 2  2259
1256
- 3  2259
1256

3_039

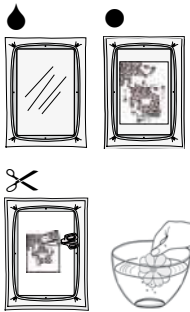




Width: 107 mm
4.2 inch


Height: 105 mm
4.1 inch

Stitches: 4700

Robison-Anton
Gütermann Sulky

- 1  2595
1176
- 2  2595
1176
- 3  2595
1176

3_040

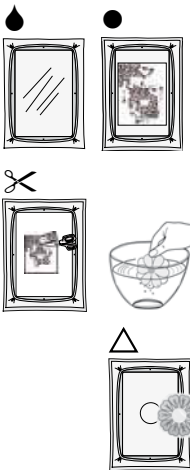

Width: 108 mm
4.3 inch

Height: 100 mm
3.9 inch

Stitches: 5200


Robison-Anton
Gütermann Sulky

- 1  2595
1176
- 2  2595
1176
- 3  2595
1176
- 4  1009
7013

4 3_039
3_038



3_041

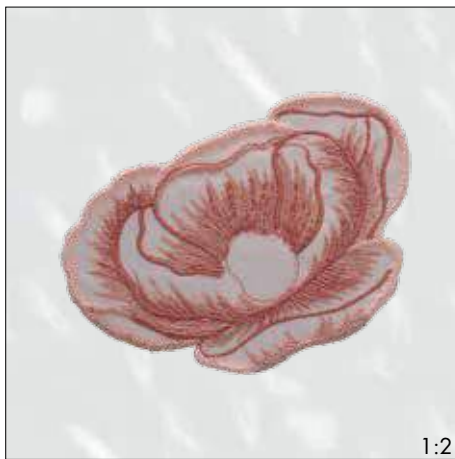






Width: 96.2 mm
3.8 inch


Height: 76.9 mm
3.0 inch

Stitches: 10094

Robison-Anton
Gütermann Sulky

- 1  2503
1015
- 2  2503
1015
- 3  2503
1015
- 4  2299
1064
- 5  2611
1216

3_042

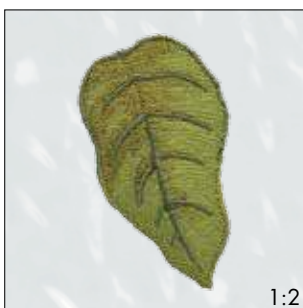

Width: 41.5 mm
1.63 inch


Height: 69.5 mm
2.74 inch

Stitches: 6430

Robison-Anton
Gütermann Sulky

- 1  2546
1227
- 2  2542
1227
- 3  2545
1173

3_043



Width: 41.5 mm
1.63 inch

Height: 69.5 mm
2.74 inch

Stitches: 6430

Robison-Anton
Gütermann Sulky

- 1  2546
1227
- 2  2542
1227
- 3  2545
1173

3_044



Width: 183.1 mm
7.21 inch

Height: 252.2 mm
9.97 inch


Stitches: 53014

Robison-Anton
Gütermann Sulky

- | | | | |
|----|----------------|----|----------------|
| 1 | ■ 2567
1267 | 13 | ■ 2546
1227 |
| 2 | ■ 2337
1131 | △ | |
| 3 | ■ 2546
1227 | 14 | ■ 2545
1173 |
| 4 | ■ 2542
1227 | △ | |
| 5 | ■ 2545
1173 | 15 | ■ 2545
1173 |
| 6 | ■ 2544
1173 | 16 | ■ 2605
0502 |
| 7 | ■ 2503
1015 | △ | |
| 8 | ■ 2249
1035 | 17 | ■ 2605
0502 |
| 9 | ■ 2611
1216 | 18 | ■ 2376
1035 |
| 10 | ■ 2230
1227 | | |
| 11 | ■ 2542
1227 | | |
| 12 | ■ 2545
1173 | | |

- 14 3_043
- 15 3_042
- 17 3_041

3_055

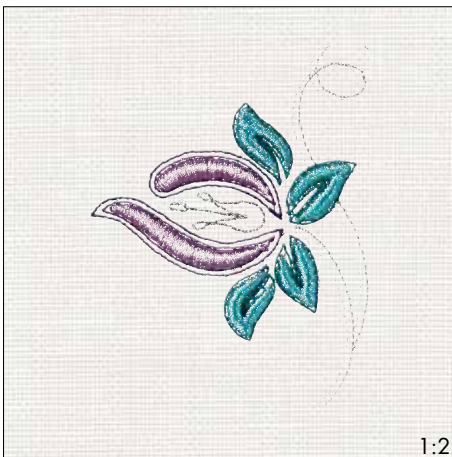

Width: 74.4 mm
3.0 inch

Height: 98.9 mm
3.9 inch

Stitches: 6413

Robison-Anton
Gütermann Sulky

- | | | | |
|---|----------------|---|---------------------|
| 1 | ■ 2731
1180 | 5 | ■ 2451
1517 |
| 2 | ■ 1005
7023 | | Add Embroidery Foam |
| 3 | ■ 2736
1195 | 6 | ■ 2424
1080 |
| 4 | ■ 2380
1300 | 7 | ■ 2204
1560 |
- Take away excess
Embroidery Foam

3_056



Width: 96.5 mm
3.8 inch

Height: 109.3 mm
4.3 inch

Stitches: 8 316


Robison-Anton
Gütermann Sulky

- | | | | | | |
|---|--|--------------|----|--|--------------|
| 1 | | 2425
1122 | 6 | | 2222
1204 |
| 2 | | 2380
1300 | 7 | | 2599
1111 |
| 3 | | 2736
1195 | 8 | | 2424
1080 |
| 4 | | 2451
1517 | 9 | | 2292
1545 |
| 5 | | 2521
1285 | 10 | | 2204
1560 |

Add Embroidery
Foam

Take away excess
Embroidery Foam

3_059

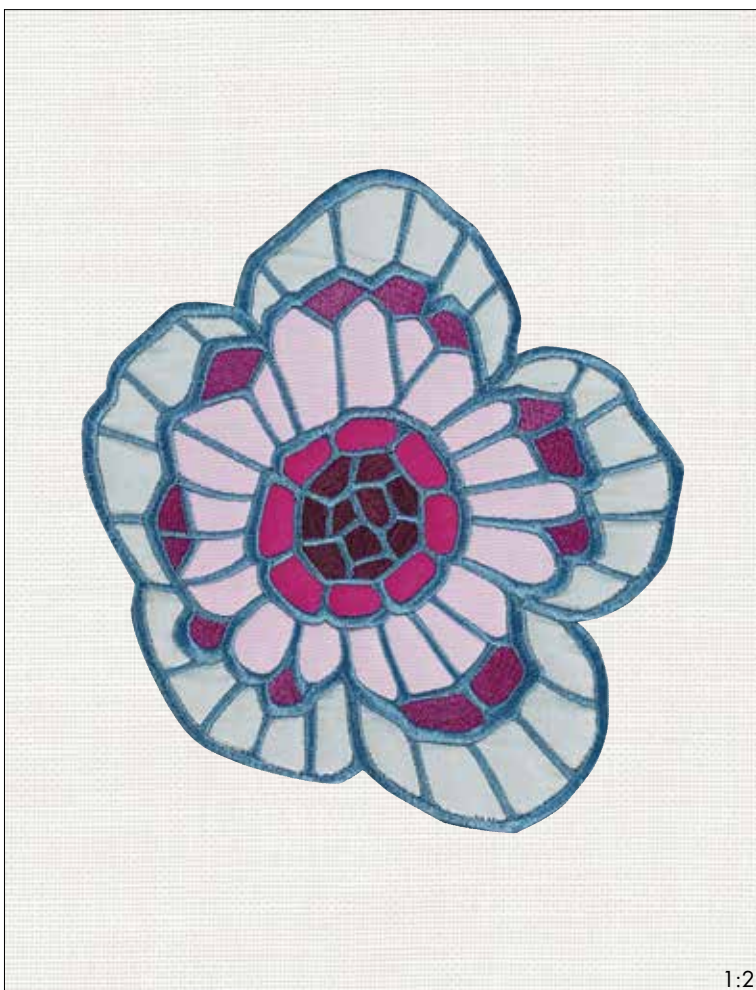

Width: 160.7 mm
6.3 inch

Height: 178.3 mm
7.0 inch


Stitches: 25193

Robison-Anton
Gütermann Sulky

- | | | | | | |
|---|--|--------------|----|--|--------------|
| 1 | | 2309
1246 | 7 | | 2309
1246 |
| 2 | | 2309
1246 | 8 | | 2309
1246 |
| 3 | | 2309
1246 | 9 | | 2309
1246 |
| 4 | | 2309
1246 | 10 | | 2376
1035 |
| 5 | | 2309
1246 | 11 | | 2590
1191 |
| 6 | | 2309
1246 | 12 | | 2560
1023 |



3_078

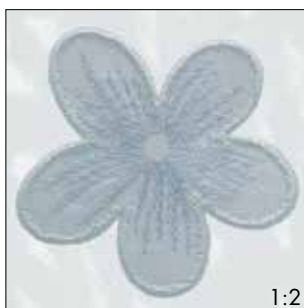


Width: 78.1 mm
3.07 inch

Height: 76.2 mm
3.00 inch



Stitches: 3796

Robison-Anton
Gütermann Sulky

- | | | |
|---|--|--------------|
| 1 | | 2485
1218 |
| 2 | | 2485
1218 |
| 3 | | 2485
1218 |
| 4 | | 2485
1218 |
| 5 | | 2539
1325 |

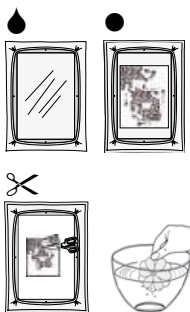

3_079

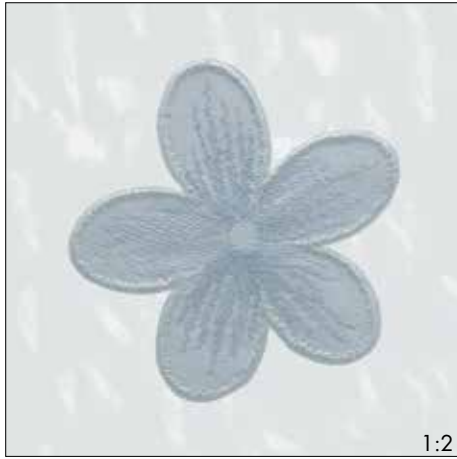






Width: 88.9 mm
3.50 inch


Height: 92.1 mm
3.63 inch

Stitches: 4541

Robison-Anton
Gütermann Sulky

- 1  2485
1218
- 2  2485
1218
- 3  2485
1218
- 4  2485
1218
- 5  2539
1325

3_080








Width: 86.4 mm
3.40 inch


Height: 85.1 mm
3.35 inch

Stitches: 4581

Robison-Anton
Gütermann Sulky

- 1  2485
1218
- 2  2485
1218
- 3  2485
1218
- 4  2485
1218
- 5  2539
1325

3_081












Width: 195.2 mm
7.69 inch

Height: 248.0 mm
9.76 inch

Stitches: 72779

Robison-Anton
Gütermann Sulky

- 1  2250
1838
- 2  2545
1156
- 3  2568
1269
- 4  2546
1227
- 5  2561
1083
- 6  2546
1227
- 7  2561
1083
- 8  2546
1227
- 9  2561
1083

4 3_078

6 3_079

8 3_080

3_093



Width: 136.5 mm
5.37 inch

Height: 152.7 mm
6.01 inch

Stitches: 7748

Robison-Anton
Gütermann Sulky

- 1 ■ 2545
1156
-
- 2 ■ 2545
1156
✂
- 3 ■ 2545
1156
●
- 4 ■ 2545
1156
- 5 ■ 2583
2114
- 6 ■ 2545
1156
- 7 ■ 2588
1080
●
- 8 ■ 2588
1080
✂
- 9 ■ 2292
1032
- 10 ■ 2425
1297



3_094



Width: 93.1 mm
3.67 inch

Height: 166.3 mm
6.55 inch

Stitches: 7605

Robison-Anton
Gütermann Sulky

- 1 ■ 2583
2114
- 2 ■ 2545
1156
- 3 ■ 2588
1080
●
- 4 ■ 2588
1080
✂
- 5 ■ 2588
1080
●
- 6 ■ 2588
1080
✂
- 7 ■ 2588
1080
●
- 8 ■ 2588
1080
✂
- 9 ■ 2292
1032
- 10 ■ 2425
1297



3_097






Width: 134.9 mm
5.31 inch

Height: 198.9 mm
7.83 inch

Stitches: 15820

Robison-Anton
Gütermann Sulky


- 1  2618
1011
- 2  2618
1011
- 3  2618
1011

● Reversed appliqué



1:2

3_098

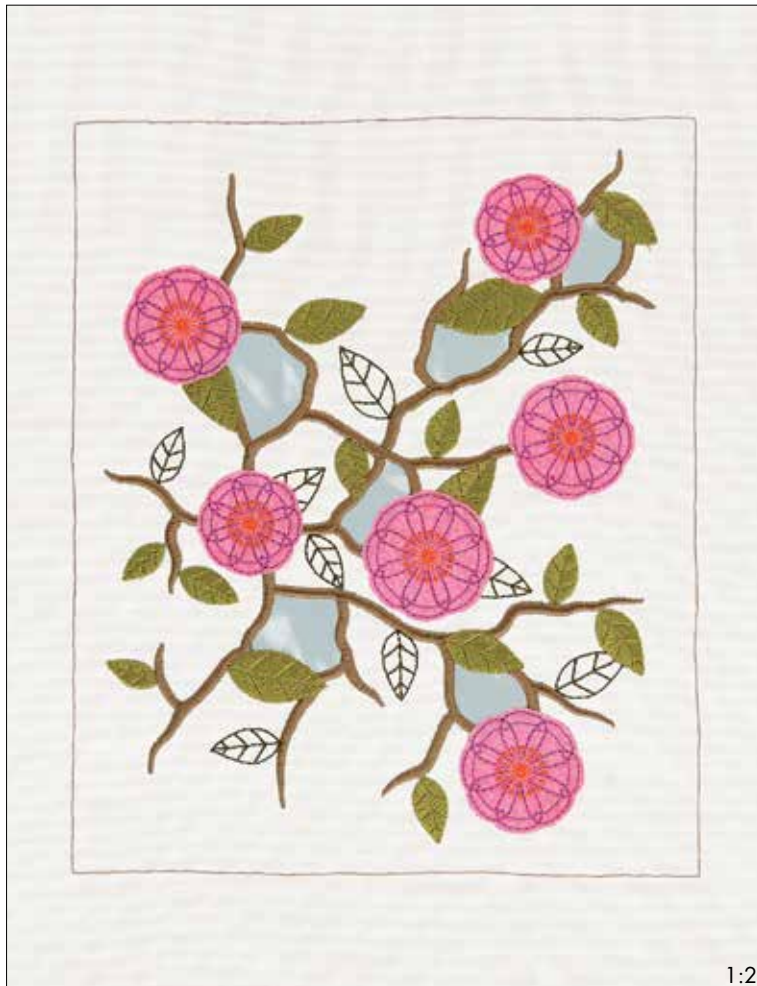

Width: 195.0 mm
7.68 inch



Height: 236.3 mm
9.30 inch

Stitches: 32705

Robison-Anton
Gütermann Sulky

- 1  2477
1228

(✂) Cut inside marked area if not using INSPIRA™ Cutwork Needles

- 2  Needle #1
- 3  Needle #2

* Add a new water soluble stabilizer underneath

- 4  2477
1228

(✂) Trim and remove the cut fabric

- 5  2477
1228

- 6  2230
1834


- 7  2601
1210

- 8  2291
1231

- 9  2291
1231

- 10  2397
1246

(✂) Clean the bobbin area



1:2



3_099

Width: 115.0 mm
4.53 inch

Height: 115.0 mm
4.53 inch

Stitches: 12937

Robison-Anton
Gütermann Sulky

1 ■ 2477
1228

(✂) Cut inside marked area
if not using INSPIRA™ Cutwork
Needles

2 Needle #1

3 Needle #2

* Add a new
water soluble stabilizer
underneath

4 ■ 2477
1228

Trim and remove
the cut fabric

5 ■ 2477
1228

6 ■ 2230
1834


7 ■ 2601
1210

8 ■ 2291
1231

9 ● 2291
1231

10 ■ 2397
1246

Clean the bobbin
area

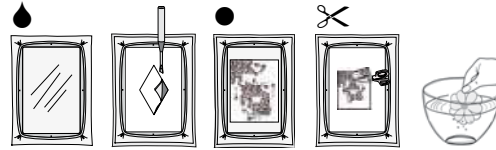

1:2



3_100

Width: 81.0 mm
3.19 inch

Height: 144.2 mm
5.68 inch

Stitches: 17770

Robison-Anton
Gütermann Sulky

1 ■ 2425
1297

2 ■ 2424
1810

(✂) Cut inside marked area
if not using INSPIRA™ Cutwork
Needles

3 Needle #1

4 Needle #2

* Add a new water soluble
stabilizer underneath


5 ■ 2254
1811

Trim and remove the cut
fabric


6 ■ 2254
1811

7 ■ 2381
1122

Clean the bobbin area

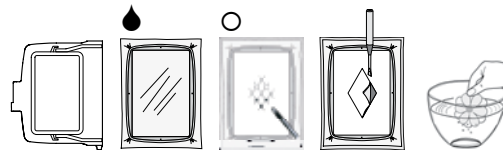

1:2

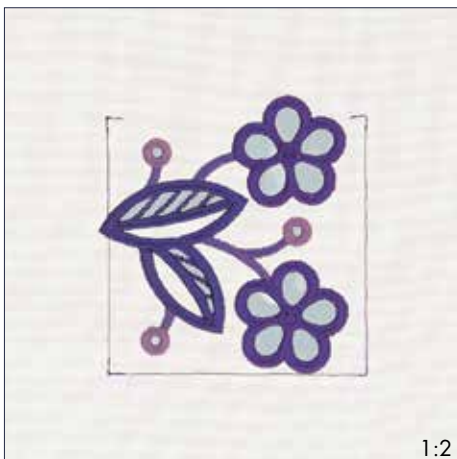

3_101

Width: 83.9 mm
3.30 inch

Height: 88.0 mm
3.46 inch

Stitches: 12114

Robison-Anton
Gütermann Sulky

1 ■ 2425
1297

2 ■ 2424
1810

(✂) Cut inside marked
area if not using INSPIRA™
Cutwork Needles

3 Needle #1

4 Needle #2

* Add a new water
soluble stabilizer underneath


5 ■ 2254
1811

Trim and remove the
cut fabric

6 ■ 2254
1811

7 ■ 2381
1122

Clean the bobbin area

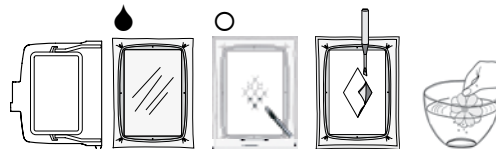

1:2